




Mounting the Anant Holdfast

STANDARD INSTALLATION:

FLANGE FLUSH ON TOP OF BENCH


Use this technique on softwood tops at least 2" thick. First, countersink the larger diameter of the flange to the proper depth, then drill the smaller diameter hole centered on the first hole. Secure with screws.

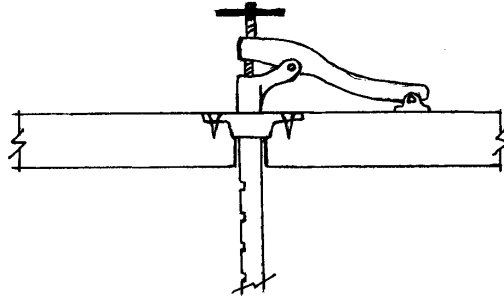

ALTERNATE METHODS:

NO FLANGE

This is the simplest method, and works well for all hardwood benches at least 2-1/4" thick. Just drill a 15/16" hole through the bench and insert the holdfast.

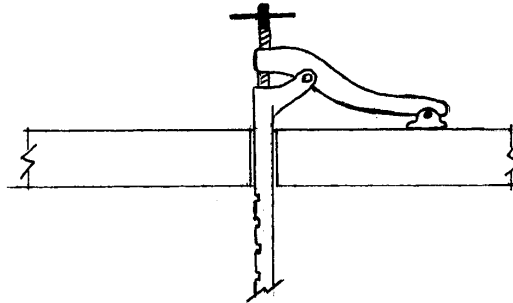

FLANGE SURFACE MOUNTED UNDER BENCH

We call this the "solid core door as a bench top approach", and is necessary if your top is less than 2" thick. All you do is drill a 15/16" hole through the top and surface mount the flange underneath the top. You will notice that the countersunk screw holes on the flange are now covered up. Secure with screws through the non-countersunk side of the holes.

