

IMPORTANT NOTICE – CORRECTION

RTJ400 Quick Reference Instruction Strips


Please note the error on the back side of the Half-Blind Dovetails QR Instruction Strip. The two drawings illustrating joint flushness in Step 12 are reversed. *The instructions on page 39 of the user guide are correct.*

Please be sure to register your RTJ400 so we can send you a new strip as soon as it is available.

We apologize for any inconvenience this has caused.

CORRECT

12. If the joint is over flush, move the frame pin to a “-” position, or if under flush, a “+” position. ■

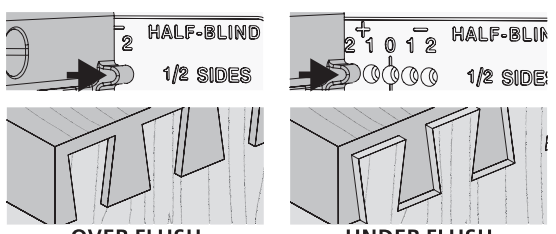


OVER FLUSH **UNDER FLUSH**

HALF-BLIND DOVETAILS
LEIGH RTJ400

INCORRECT

12. If the joint is over flush, move the frame pin to a “-” position, or if under flush, a “+” position. ■

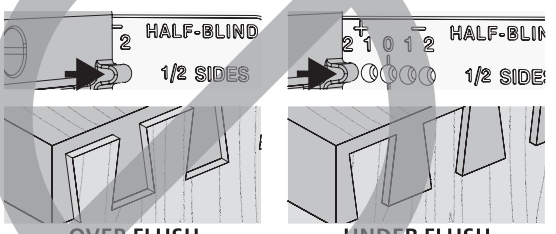

OVER FLUSH **UNDER FLUSH**

HALF-BLIND DOVETAILS
LEIGH RTJ400

